

 
# Control Center for Rugged Tablets and Laptops Operation Guide

## Introduction

The Control Center is the central portal to access major system modules and settings. Authorized users can enable/disable radios (Wi-Fi, Bluetooth, or optional WWAN) and/or optional modules. All users can change the settings for all modules to adjust the LCD brightness, screen orientation, and touch modes based on where and how the tablet is being used so it benefits the end users the most.

## Access to Control Center from the Windows Desktop

The Control Center application can be launched from the **Windows System Tray**. Tap  icon to launch the software.

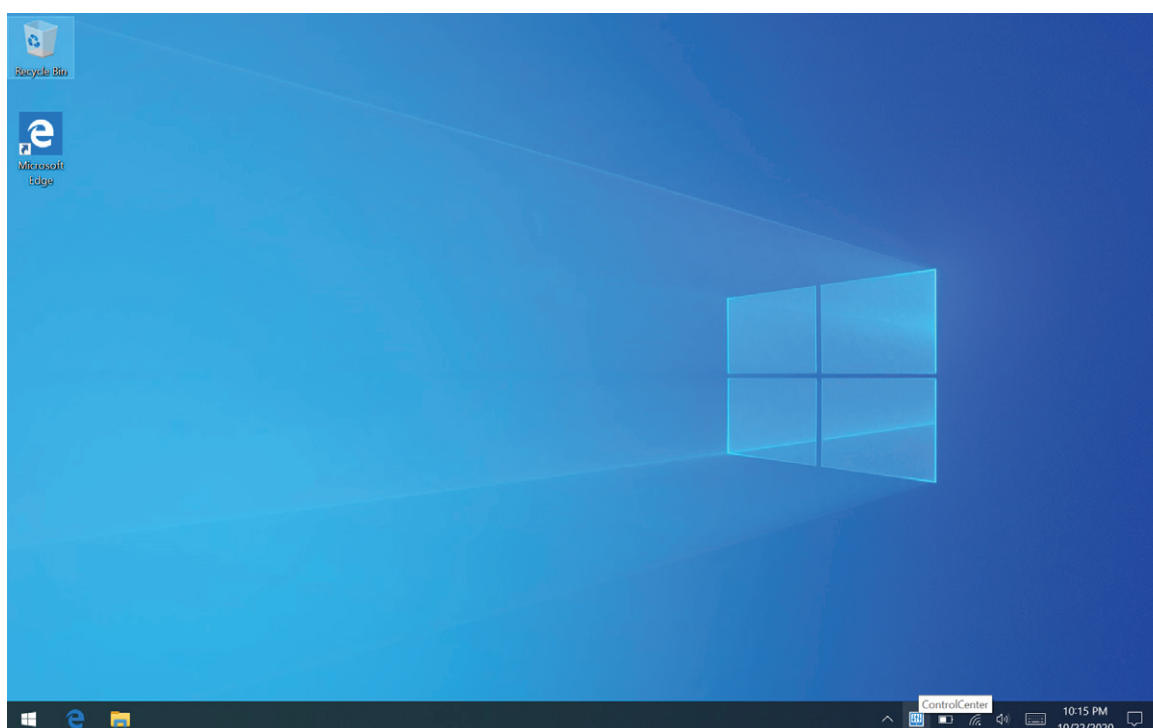



Once the application is launched, the Control Center runs under **Normal User Mode**.


Under this mode, you cannot turn on/off the modules, like Wireless, Bluetooth, Cameras, GNSS, and Barcode Scanner. You will see the module and settings icons below.

### NOTE:

The module icon(s) will be displayed only when there is/are related module(s) installed on your tablet and laptop.

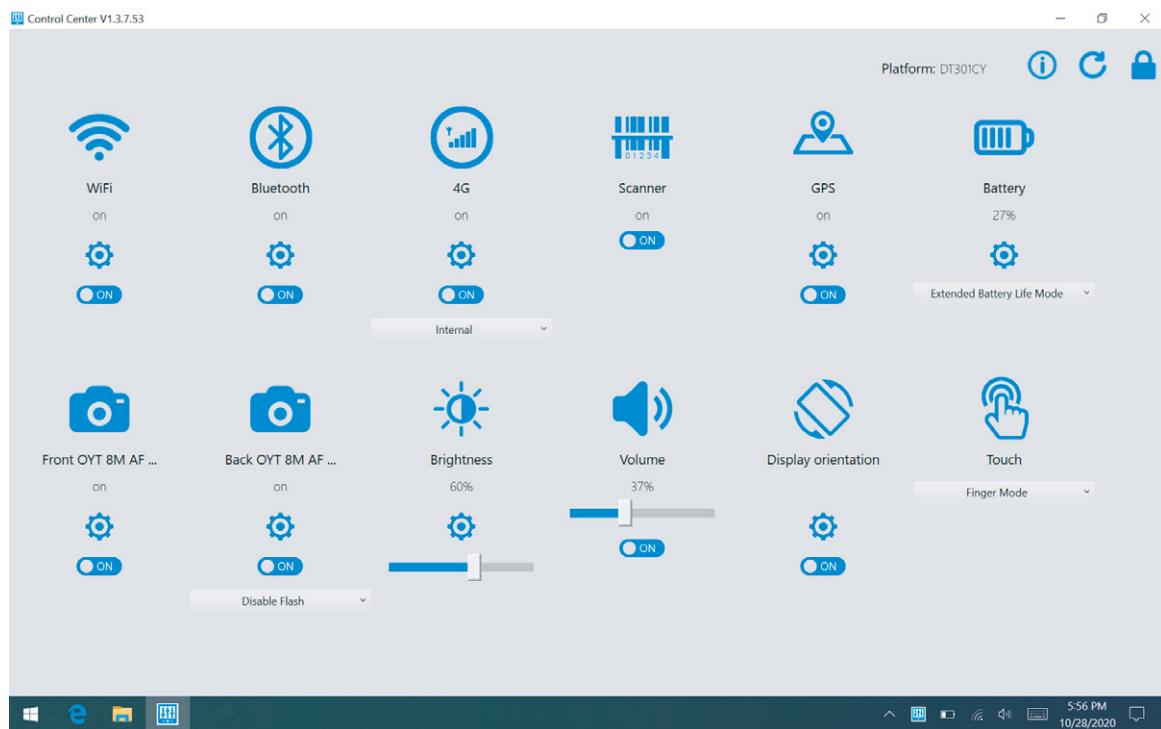 



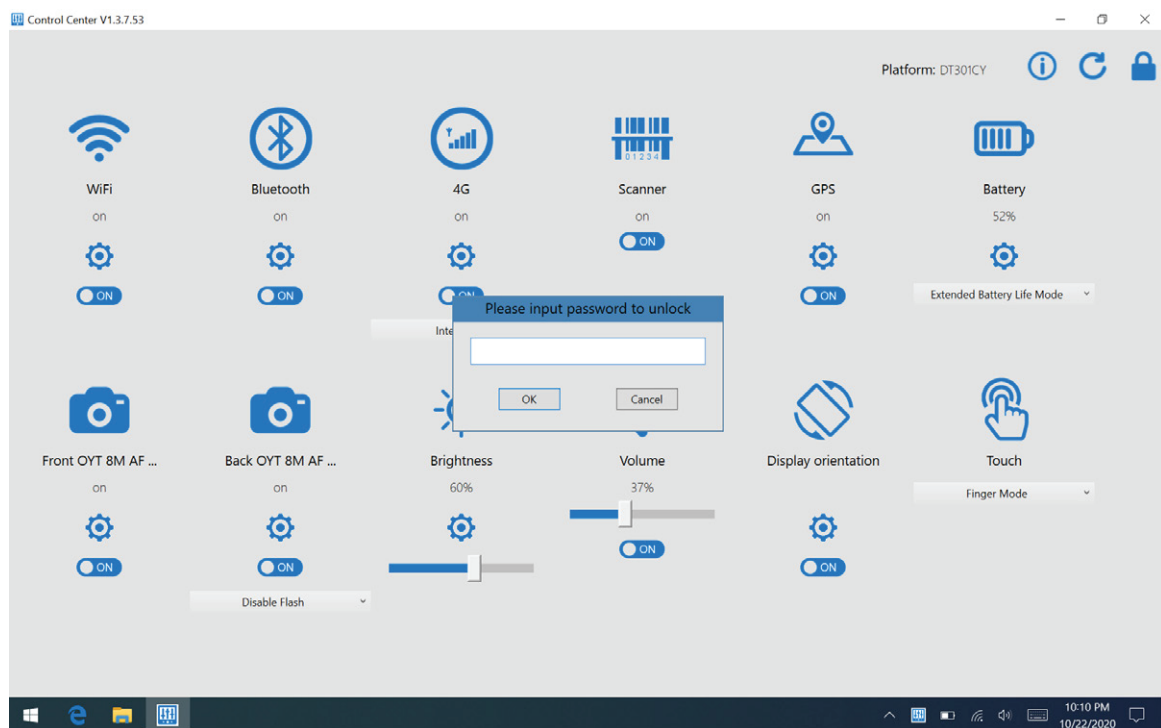 










 









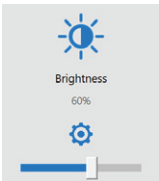 

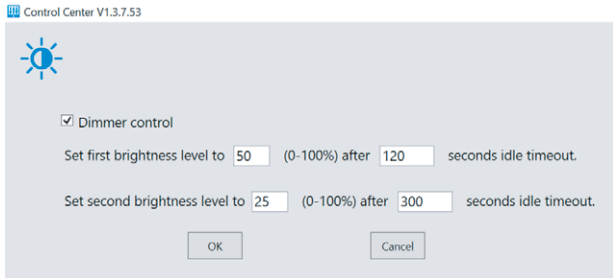 
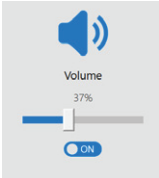 
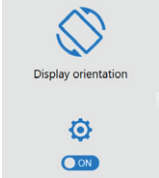 

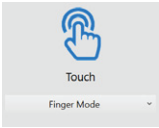 
To access the **Authorized User Mode**, click on the lock icon  on the top right corner of the application window, then a dialogue window opens for the authorized user to enter the password. The default password is **DTRI** (all caps).



The module and settings icons will be shown as below; same as Normal User Mode.


## Module Function Settings


 <p>WiFi on</p>  <p>ON</p>	<p>Tap the <b>On/Off</b> button to enable or disable the WLAN connection.*</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>Bluetooth on</p>  <p>ON</p>	<p>Tap the <b>On/Off</b> button to enable or disable the Bluetooth connection.*</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>4G on</p>  <p>ON</p> <p>Internal</p>	<p>Tap the <b>On/Off</b> button to enable or disable the 4G WWAN/LTE connection.*</p> <p>The drop-down menu allows users to select to use internal or external antenna.</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>Scanner on</p> <p>ON</p>	<p>Tap the <b>On/Off</b> button to enable or disable the Barcode Scanner module.*</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>GPS on</p>  <p>ON</p>	<p>Tap the <b>On/Off</b> button to enable or disable the GNSS module.*</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>Battery 27%</p>  <p>Extended Battery Life Mode</p>	<p>The drop-down menu allows users to quickly switch the power modes of the tablet. Select <b>Max Battery Performance Mode</b> to enable the system performance, and to save the system power, select <b>Extended Battery Life Mode</b>.</p> <p><b>Max Performance Mode:</b> to charge the battery pack(s) to full design capacity.</p> <p><b>Extended Battery Life Mode:</b> to charge the battery pack(s) to 80% design capacity to extend the lifespan.</p> <div data-bbox="400 1420 1418 1487"> <p><b>NOTE:</b> By default, the setting is Extended Battery Life Mode.</p> </div> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>Front OYT 8M AF ... on</p>  <p>ON</p>	<p>Tap the <b>On/Off</b> button to enable or disable the Front Camera module.*</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
 <p>Back OYT 8M AF ... on</p>  <p>ON</p> <p>Disable Flash</p>	<p>Tap the <b>On/Off</b> button to enable or disable the Back Camera module.*</p> <p>The drop-down menu allows users to enable and disable the LED flash light.</p> <p>Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p> <div data-bbox="400 1879 1418 1980"> <p><b>NOTE:</b> The LED flash lights are for certain models, and the drop down menu is only available when there are LED flash lights installed.</p> </div>


	<p>Slide the bar to adjust the screen brightness, supports 0% to 100%. Tap  to enter <b>Dimmer Control</b>.</p> 
	<p>Tap the <b>On/Off</b> button to turn the speaker on or off. Slide the bar to adjust the volume, supports 0% to 100%.</p>
	<p>Tap the <b>On/Off</b> button to lock or release the screen rotating. Tap  to enter the Microsoft Windows Settings for the advanced adjustment.</p>
	<p>The drop-down menu allows users to quickly select the screen sensitivity. It supports <b>Finger Mode</b>, <b>Glove Mode</b>, and <b>Water Mode</b>.</p> <div style="border: 1px solid #00a0c0; padding: 5px; background-color: #e0f2f7;"> <p><b>NOTE:</b> Water Mode supports workable capacitive touch while there is water on the screen.</p> </div>

\*Can be set up only under the Authorized User Mode

## More Settings

After setting up, the authorized user is allowed to exit the authorized user mode by tapping .

The Control Center will automatically refresh the module status. To manually refresh the module status, tap .

To change the authorized user password, tap  and a dialogue window opens. Enter the current password, then the new password. Tap **OK** to save the settings.

